



Installation of Vinyl Replacement Windows

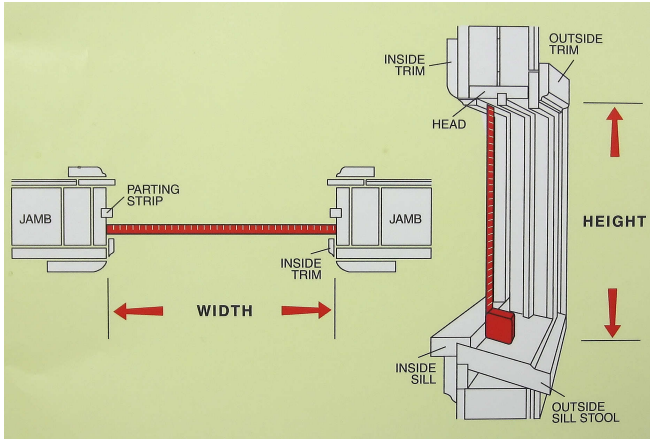


Accurate Measurement is the Key to Quality Installation

The width must be measured from jamb to jamb as shown. The height is measured from the sill (from the point against the stool) to the header (the point against the inside stop). It is also important to measure the squareness (the diagonals) of the window openings. Depending on the recommendations of your installer, you may want to downsize the measurements for both width and height by approximately 3/8 of an inch when ordering your exact size window sizes.

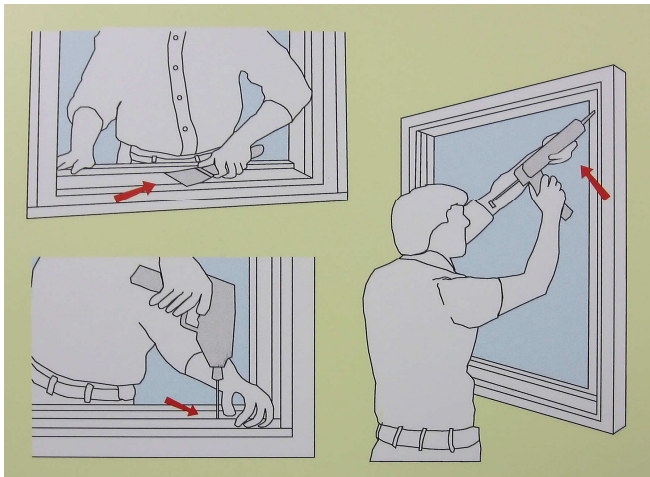

Prepare the Window Opening

Remove the inside trim (finish stop), bottom sash, parting stop, and the upper sash. Save the inside trim to re-apply to your new window. Do not remove the outside trim (blind stop). Clean the opening of any debris, hooks, fasteners, etc. from the opening and inside face of the blind stop. Fill holes with insulation and cover with aluminum tape. Check your window for proper fitting allowance. Run a bead of caulk on the inside face of the blind stop.

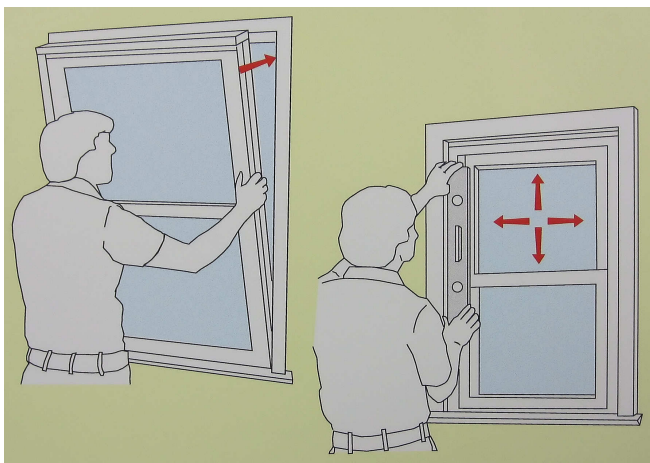

Install the Window

Place the window into the caulked opening. Lift the window and set the bottom in first, then raise the top until it rests against the blind stop. Use shims, mounting screws or jamb adjusters (Double Hung only) as necessary to insure window is plumb, level and square in the opening. It is best to use shims near the corners of the windows. Single Hung and Double hung windows will have pre-drilled holes at the top and bottom of the window jamb for screw placement (sash stops may need to be removed to access). Never use screws in the sill of the window. Caulk the gap on both sides and along the top before re-attaching the inside trim (finish stop). Attach sill expanders if needed. Caulk around exterior of window at blind stops and sill.